



BOATLIFTS AND MARINE PRODUCTS

LINEAR TRANSMITTER PROGRAMMING INSTRUCTIONS

POWER MUST BE TURNED "ON" TO PANEL FOR PROGRAMMING.

1) REMOVE CONTROL PANEL FRONT COVER AND LOCATE RECEIVER IN BOTTOM RIGHT CORNER OF PANEL.

2) HOLD TRANSMITTER BESIDE RECEIVER AS SHOWN BELOW (NOTE ALIGNMENT OF THE BUTTONS ON THE TRANSMITTER AND RECEIVER)

3) MOMENTARILY PRESS AND RELEASE THE CHANNEL 2 BUTTON AND THEN HOLD THE UP BUTTON ON TRANSMITTER FOR 5 SECONDS.

4) WAIT 15 SECONDS.

5) MOMENTARILY PRESS AND RELEASE THE CHANNEL 1 BUTTON AND THEN HOLD THE DOWN BUTTON ON TRANSMITTER FOR 5 SECONDS.

6) PROGRAMMING IS COMPLETE, TEST TRANSMITTER IN EACH DIRECTION.

IF THE REMOTE CONTROL IS NOT FUNCTIONING PROPERLY, CLEAR RECEIVER BY PRESSING AND HOLDING CHANNEL 1 BUTTON FOR 10 SECONDS AND THEN REPEAT FOR CHANNEL 2 FOR 10 SECONDS. THEN REPEAT STEPS ABOVE.

IF THE LIGHT ON THE TRANSMITTER DOES NOT LIGHT OR IS DIM, BATTERY LEVEL IS LOW AND NEEDS TO BE REPLACED.

CALL HI-TIDE SALES IF REMOTE STILL DOES NOT FUNCTION PROPERLY.

