



BOATLIFTS AND MARINE PRODUCTS

TRANSMITTER PROGRAMMING INSTRUCTIONS WITH LIGHT KIT

POWER MUST BE TURNED "ON" TO PANEL FOR PROGRAMMING.

- 1) REMOVE CONTROL PANEL FRONT COVER AND FLIP AROUND TO LOCATE A RED PROGRAMMING WIRE INSIDE A CLEAR POUCH ON THE BACKSIDE OF THE COVER.**
- 2) OPEN BACK SIDE OF TRANSMITTER AND LOCATE PROGRAMMING SOCKET IN CENTER. LOCATE PROGRAMMING SOCKETS ON RECEIVER BOARD INSIDE PANEL.**
- 3) INSERT ONE END OF PROGRAMMING WIRE INTO TRANSMITTER AND ONE END INTO RECEIVER. LIGHT ON TRANSMITTER SHOULD ILLUIMNATE CONTINUOUSLY.**
- 4) PRESS AND HOLD "UP" BUTTON FOR 2 SECONDS.**
- 5) FLIP #1 DIP SWITCH TO THE "ON" POSITION.**
- 6) PRESS AND HOLD "DOWN" BUTTON FOR 2 SECONDS.**
- 7) FLIP #1 DIP SWITCH TO THE OFF POSITION.**
- 8) REMOVE PROGRAMMING WIRE FROM UP/DOWN RECEIVER AND INSERT IN PROGRAMMING SOCKET ON LIGHT RECEIVER.**
- 9) PRESS AND HOLD "LIGHT" BUTTON FOR 2 SECONDS.**
- 10) DISCONNECT PROGRAMMING WIRE FROM RECEIVER AND TRANSMITTER.**
- 11) PROGRAMMING IS COMPLETE, TEST TRANSMITTER IN EACH DIRECTION.**

IF THE REMOTE CONTROL IS NOT FUNCTIONING PROPERLY, PLACE METALLIC OBJECT ACROSS PINS MARKED "CC" AND THEN REPEAT STEPS ABOVE.

IF THE LIGHT ON THE TRANSMITTER BLINKS ONCE PER SECOND, BATTERY LEVEL IS LOW AND NEEDS TO BE REPLACED.

CALL HI-TIDE SALES IF REMOTE STILL DOES NOT FUNCTION PROPERLY.

