



## BOATLIFTS AND MARINE PRODUCTS

### TRANSMITTER PROGRAMMING INSTRUCTIONS (433.1 - 434.7 MHz)

**POWER MUST BE TURNED "ON" TO PANEL FOR PROGRAMMING. "POWER ON" LED ON RECEIVER BOARD WILL ILLUMINATE YELLOW.**

#### **UP / DOWN RECEIVER PROGRAMMING**

- 1) PRESS AND HOLD "PROGRAM 1" BUTTON ON UP/DOWN RECEIVER BOARD.**
- 2) PRESS AND HOLD "UP" BUTTON ON TRANSMITTER FOR 2 SECONDS. "CH1" LED WILL FLASH RED AND THEN SOLID GREEN.**
- 3) RELEASE "PROGRAM 1" BUTTON.**
- 4) PRESS AND HOLD "PROGRAM 2" BUTTON ON UP/DOWN RECEIVER BOARD.**
- 5) PRESS AND HOLD "DOWN" BUTTON ON TRANSMITTER FOR 2 SECONDS. "CH2" LED WILL FLASH RED AND THEN SOLID GREEN.**
- 6) RELEASE "PROGRAM 2" BUTTON ON RECEIVER BOARD.**

**TEST TRANSMITTER TO CONFIRM CORRECT PROGRAMMING**


#### **LIGHT RECEIVER PROGRAMMING**

- 1) PRESS AND HOLD "PROGRAM1" BUTTON ON LIGHT RECEIVER BOARD.**
- 2) PRESS AND HOLD "LIGHT" BUTTON ON TRANSMITTER FOR 2 SECONDS. "CH1" LED WILL FLASH RED AND THEN SOLID GREEN.**
- 3) RELEASE "PROGRAM1" BUTTON.**


**TEST TRANSMITTER TO CONFIRM CORRECT PROGRAMMING.**

#### **RECEIVER RESET (DELETING ALL TRANSMITTERS)**


**PLACE A METALLIC OBJECT BETWEEN THE 2 COPPER PINS LABELED "CODE RESET 10 SEC." ON BOARD. HOLD FOR FULL 10 SECONDS. "CH1" LED WILL ILLUMINATE RED WHEN COMPLETE.**

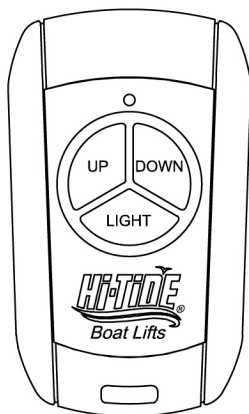

**TRANSMITTER**

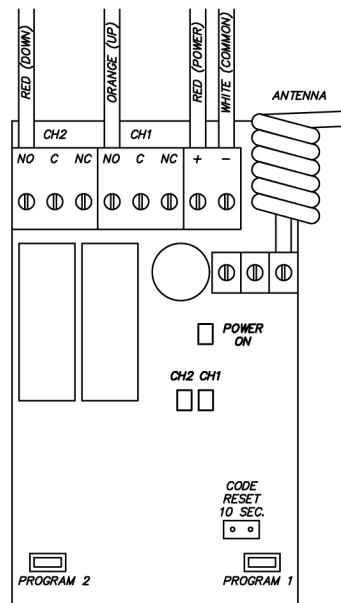

**UP / DOWN RECEIVER**

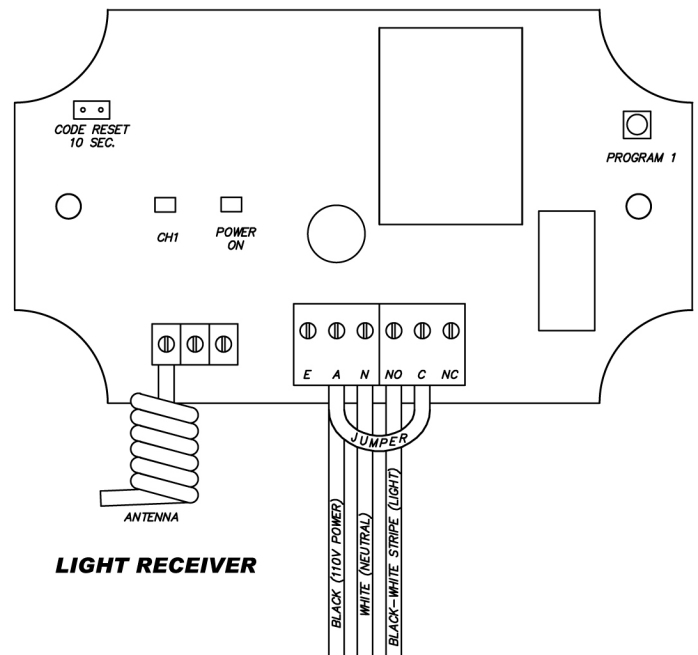

**LIGHT RECEIVER**